 




Instrument view BTE

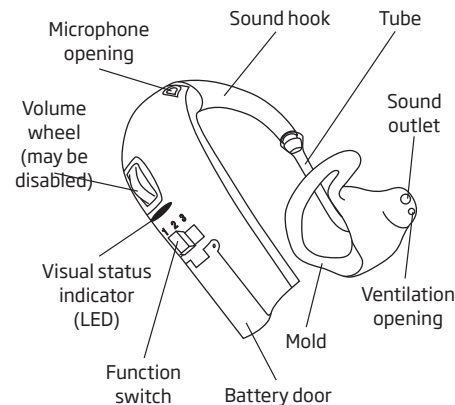

Battery size: 675

Activating the instrument for the first time

A hearing instrument (HI) is a miniature electronic device that runs on special batteries. To activate the HI, you must insert a fresh battery in the battery compartment.

The instrument will start up when the battery door is closed. It will take a few seconds until sound is produced. You will hear series of beeps. You may put on the HI immediately upon closing the battery door.

If the instrument is held in the hand while activated, it may produce a whistling sound. This will stop when properly fitted on the ear and the mold is inserted into the ear canal.

Turning your instrument ON/OFF

When turning your instrument **ON** make sure:

1. The battery drawer is closed.
2. The volume control is turned up.
3. The function switch is set to a microphone program.

When the instrument is turned on you will hear a series of beeps indicating which program is active, and that the battery is working.

The LED will flash to indicate the instrument is on, the LED will stay on, depending on configuration.

When turning your instrument **OFF** you can use one of the following options:

1. Turn the volume control down until it clicks.
2. Set the function switch to OFF if it has been programmed with an OFF position.
3. Open the battery drawer slightly.

To preserve the battery, make sure your hearing instrument is switched off when you are not wearing it.

Replacing the battery

Your battery size is 675. A worn out battery should be removed immediately and disposed according to local regulations.

When battery power is low, you will hear two beeps. If the LED status indicator is programmed to be steady on, it will turn off. This indicates that it is time to change the battery. It is not an indication of malfunction.

To replace the battery, follow these instructions:

- Open the battery door completely by pushing the raised edge at the bottom of the instrument. Remove the old battery.
- Remove the sticky label from the + side of the new battery
- Insert the new battery (size 675, preferably dedicated super power battery). Ensure that the positive (+) marking faces the positive (+) sign printed on the battery door.
- Close the battery door. If you feel any resistance it could be that you have placed the battery incorrectly. Reinsert the battery and try again.

Any moisture on the battery surface should be wiped off before use. When you change batteries, it may take a couple of minutes before the new battery works with full effect.

IMPORTANT NOTICE

Open the battery compartment fully to allow air to circulate whenever you are not using your hearing instrument, particularly overnight.

 
Left/Right indicator

Hearing instruments are fitted to the uniqueness of each ear, which means if you have two instruments then your left hearing instrument is programmed differently from your right. That is why it is important to distinguish between the left hearing instrument and the right.

In order to easily identify whether it is left ear or right ear instrument, color indicators may be applied.


A blue indicator marks the **LEFT** instrument.

A red indicator marks the **RIGHT** instrument.

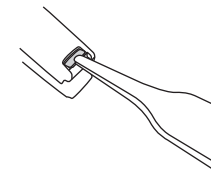


Putting on your instrument

 
Place the tip of the mold in your ear canal, slightly twist, making sure that the top part of the mold (A) is pushed behind and under the fold (B) of your ear.

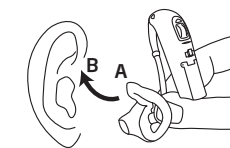

 Gently pull your ear and press the mold in the direction of the ear canal.

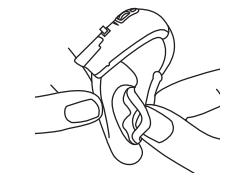

 
With the mold positioned correctly in your ear, place the HI behind your ear by lifting its lower part and sliding it over the top of your ear.

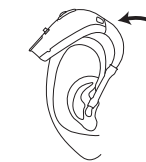

Function switch

Your hearing instrument has a 3-position function switch for changing between different programs.

 - When you switch between different programs, your hearing instrument will beep.
- Operate the function switch to change program. The number of beeps will indicate which program you are using if beeps are enabled.

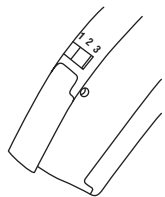




Programs (optional)

Your hearing instrument can have up to 3 different programs.

The number and type of programs available in your HI is programmed by your Hearing Care Professional.

Please note that one program may be programmed as an off position. (Optional)

	One beep, when you switch to program 1
	Two beeps, when you switch to program 2
	Three beeps, when you switch to program 3

Volume control (optional)

The volume wheel may be activated. The volume wheel allows you to adjust the volume in specific situations to the level you feel comfortable with.

The preferred volume level can be indicated by 3 beeps. This level has been programmed according to your preferences. Consult your Hearing Care Professional if you find this level too loud or too weak in most situations.

 
The volume wheel has markings 1, 2, 3 and 4 and a 'click' position.

Turning up the wheel increases the volume. Maximum setting (4) gives you the loudest sound.

Turning down the wheel decreases the volume. Minimum setting (1) gives you the quietest sound.

If you turn the wheel below 1 you can feel a 'click' and the instrument turn off.

The volume control can be disabled if you do not wish to use it. This will also disable the off functionality.

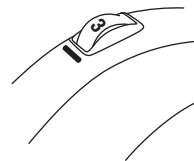

Telecoil (optional)

The telecoil is a receiver for audio signals transmitted from an inductive loop installation. The telecoil is meant for telephone* conversations and for loop systems in places such as theatre, churches or lecture rooms.

The hearing instrument's telecoil is activated by the setting the function switch to the proper program. When activated, you will hear a certain number of beeps corresponding to the telecoil program.

See the "Hearing program description" for where the telecoil program is placed.

This logo incorporates the universal symbol for hearing assistance, the "T" signifies an available telecoil compatible system.



 
** Requires a telephone with built in tele loop. Tele loop is a common standard for assisted listening and transmits the audio to the telecoil in the hearing instrument.*

Tamper-resistant battery door (optional)

To keep the battery out of reach of infants, small children and people with cognitive impairment, a tamper-resistant battery door should be used.

Instructions:

To remove the battery, open the battery drawer. (If a DAI or FM shoe is attached, the shoe has to be removed). Insert the end of a ballpoint pen or the like into the small recess in the corner. Push the battery with the ballpoint until the battery is released.

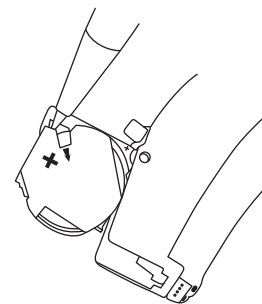

IMPORTANT NOTICE

Do not force the battery door beyond its fully opened position. Insert the battery correctly. Excessive force can deform the battery door, which will reduce its tamper resistant effectiveness.

Settings overview for your HI

Hearing program description	
No. 1	
No. 2	
No. 3	