Instructions for use



BTE

Alta2 Nera2 Ria2 Alta Nera Ria



Model overview

This booklet is valid for Oticon BTE in the following hearing aid familie and models:					
□ Alta2 Pro□ Alta2	□ Nera2 Pro□ Nera2	□ Ria2 Pro □ Ria2			
☐ Alta Pro	□ Nera Pro	□ Ria Pro			

☐ Alta ☐ Nera ☐ Ria

The BTE is available in the below fittling levels:

☐ Fitting level 85☐ Fitting level 100 (Power instrument)

Introduction to this booklet

This booklet guides you in how to use and maintain your new hearing aid. Please read the booklet carefully including the **Warning section**. This will help you to achieve the full benefit of your new hearing aid.

Your hearing care professional has adjusted the hearing instrument to meet your needs. If you have additional questions, please contact your hearing care professional.

For your convenience this booklet contains a navigation bar to help you navigate easily through the different sections.

| About | Start up | Handling | Options | Warnings | More Info |

Intended use

The hearing aid is intended to amplify and transmit sound to the ear, and thereby compensate for impaired hearing within mild to severe-to-profound hearing loss. This hearing aid is intended for use by adults and children older than 36 months.

IMPORTANT NOTICE

The hearing aid amplification is uniquely adjusted and optimised to your personal hearing capabilities during the instrument fitting performed by your hearing care professional.

Table of contents 1/2

About		
	Identify your hearing aid style and earpiece	10
	BTE with sound hook and mould	12
	BTE with thin tube (Corda miniFit)	14
	Identify left and right hearing aid	16
	Battery	17
Start up		
	Turn the hearing aid on and off	18
	When to replace a battery	19
	Replace the battery	20
Handling		
	Caring for your hearing aid	22
	MultiTool for handling batteries and cleaning	23
	Sound hook with mould	24
	Put on the hearing aid with mould	25
	Clean the mould	26
	Wash the mould	27

	Thin tube (Corda miniFit)	28
	Put on the hearing aid with thin tube	29
	Clean the thin tube	30
	Standard earpieces: dome or Grip Tip	37
	Replace dome or Grip Tip	3:
	Thin tube with Micro mould or LiteTip	34
	Clean Micro mould or LiteTip	3:
	Replace ProWax filter	36
ptions		
-	Optional features and accessories	38
	Mute the hearing aid	39
	Change programs	40
	Change volume	47
	Tamper-resistant battery drawer	44
	Wireless accessories	40
	Other options	48
	·	

Table of contents 2/2


Warnings		
	Warnings	50
More info		
	Troubleshooting guide	50
	Water resistant	58
	Conditions of use	59
	Technical information	6
	Warranty	7:

Identify your hearing aid style and earpiece


There are two different attachments and several different earpieces which classify your hearing aid style. Please identify your attachment and earpiece. This will make it easier for you to navigate through this booklet.

☐ BTE with sound hook and mould

A hearing aid with a sound hook will have a mould as earpiece.

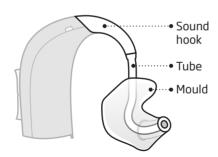


☐ BTE with thin tube (Corda miniFit)

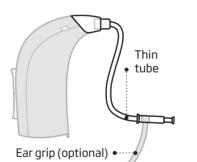

Earpieces

 A hearing aid with a thin tube will have one of the following earpieces:









^{*} Please see details for replacing the dome or Grip Tip in section: "Replace dome or GripTip".

BTE with sound hook and mould

What it is

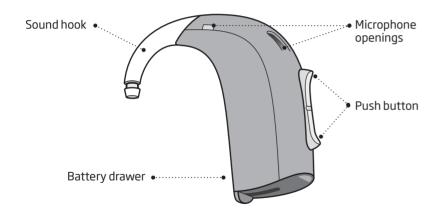


What it does

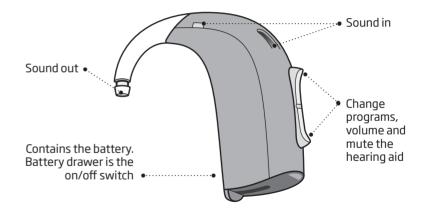


BTE with thin tube (Corda miniFit)

What it is

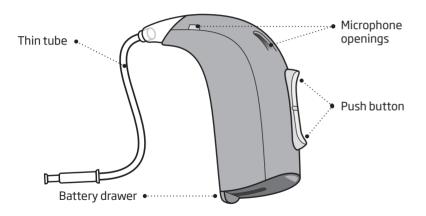


What it does

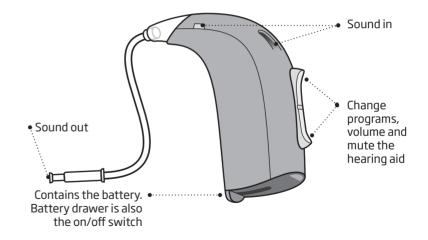


Identify left and right hearing aid

It is important to distinguish between the left and the right hearing aid as they might be programmed differently.

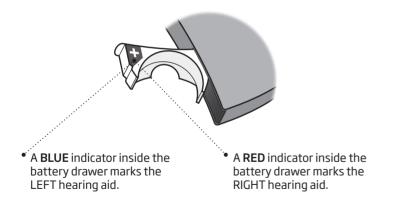

Battery

Your hearing aid is a miniature electronic device that runs on special batteries. To activate the hearing aid, you must insert a new battery in the battery drawer. See how in the "Replace the battery" section.

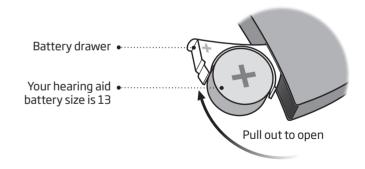

Turn the hearing aid on and off

The battery drawer is also used to switch the hearing aid on and off. To preserve the battery, make sure your hearing aid is switched off when you are not wearing it.

Turn ON Close the battery drawer with the battery in place.



Turn OFF
Open the
battery drawer.

When to replace a battery

When it is time to replace the battery you will hear two beeps repeated in moderate intervals until the battery runs out.



Two beeps = The battery is running low



Four beeps
= The battery has run out

Battery maintenance tip

To make sure the hearing aid is always working bring spare batteries with you, or replace the battery before you leave home.

Replace the battery

1. Remove



Fully open the battery drawer. Remove the battery.

2. Uncover



Remove the sticky label from the + side of the new battery.

3. Insert



Insert the new battery into the battery drawer. Make sure the + side faces up.

4. Close



Close the battery drawer. The hearing aid will play a jingle through the earpiece. Hold the earpiece close to your ear to hear the jingle.

Tip



The MultiTool can be used for battery change. Use the magnetic end to remove and insert batteries.

The MultiTool is provided by your hearing care professional.

Caring for your hearing aid

When handling your hearing aid, hold it over a soft surface to avoid damage if you drop it.

Clean the microphone openings Carefully brush away debris from the openings. Gently brush the surface. Make sure the brush is not pressed in to the openings.

 


IMPORTANT NOTICE

Use a soft, dry cloth to clean the hearing aid. It must never be washed or immersed in water or other liquids

MultiTool for handling batteries and cleaning

The MultiTool contains a magnet that makes it easier to replace the battery in the hearing aid. It also contains a brush and wire loop for cleaning and removing earwax. If you need a new MultiTool, please contact your hearing care professional.



IMPORTANT NOTICE

The MultiTool has a built-in magnet. Keep the MultiTool at least 30 cm away from credit cards and other magnetically sensitive devices.

Sound hook with mould

Read the following pages if you have a hearing aid with a sound hook and a mould.

The mould is customised for you and fits your ear.



Put on the hearing aid with mould





Gently pull your ear outwards and press the mould in the direction of the ear canal, twisting slightly.

Step 2



Place the hearing aid behind your ear.

Clean the mould

The mould should be cleaned regularly. Use a soft cloth to clean the surface of the mould. Use the MultiTool wire loop to clean the opening.

Replace the tube

The tubing between the mould and the hearing aid should be replaced when it becomes yellow or stiff. Consult your hearing care professional in relation to this.



Wash the mould

Step 1



 
Make sure you are able to identify which mould is for which hearing aid before disconnecting them from the hearing aids.

Step 2



Disconnect the tube and mould from the hook. Hold the hook firmly, when pulling off the tube. Otherwise the hearing may be damaged.

Step 3




Wash the mould and tube using mild soap. Rinse and dry completely before reconnecting to the hearing aid.

Thin tube (Corda miniFit)

Read the following pages if your hearing aid has a thin tube (Corda miniFit) with either a dome, GripTip, Micro mould or LiteTip earpiece.

Corda miniFit is a thin tube that brings the sound into your ear. The thin tube should always be used with an earpiece attached. Use only parts designed for your hearing aid.

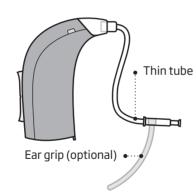

Put on the hearing aid with thin tube

Step 1



Place the hearing aid behind your ear.

Step 2



Hold the bend of the tube between your thumb and index finger. The earpiece should point towards the ear canal opening.


Step 3



Gently push the earpiece into your ear canal until the thin tube sits close against the side of your head.

Clean the thin tube

The thin tube should be cleaned to keep it clear from moisture and wax. If not cleaned it could become blocked with wax which means no sound will be able to come out.

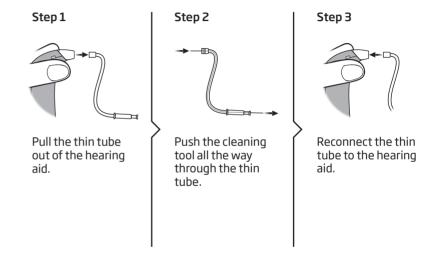

Standard earpieces: dome or Grip Tip

Both domes and Grip Tip are made of soft rubber material. There are 4 different types of domes. Check your dome type and size below.



Open dome



Bass dome, single vent



Bass dome, double vent





Grip T

Available in small and large, with and without vent.

* not for open dome

IMPORTANT NOTICE

If the earpiece is not on the speaker when removed from the ear, the earpiece might still be in the ear canal. Consult your hearing care professional for further instructions.

Replace dome or Grip Tip

 
The standard earpiece (dome or Grip Tip) should not be cleaned. If the earpiece is filled with wax, replace it with a new one (typical weekly). Grip Tips should be replaced at least once a month.

Step 1



Hold on to the end of the thin tube and then pull off the dome.

Step 2



Insert the thin tube exactly into the middle of the earpiece to obtain a secure attachment.


Step 3



Push firmly to ensure that the dome is fastened securely.

Thin tube with Micro mould or LiteTip

Read the following pages if you have a Micro mould or LiteTip earpiece. Micro mould and LiteTip are customised for your ear shape.

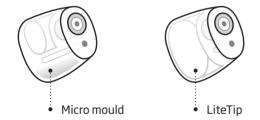


Clean Micro mould or LiteTip

The earpiece should be cleaned regularly.

The wax filter in the earpiece should be replaced when clogged or when the hearing aid does not sound normal.

 The vent is cleaned by pressing the brush through the hole, twisting it slightly.

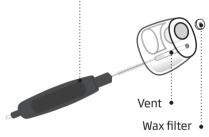


IMPORTANT NOTICE

Always use the same type of wax filter as was originally supplied with the hearing aid. If you are in any doubt about the use or replacement of wax filters, contact your hearing care professional.

Replace ProWax filter

 1. Tool



Remove the tool from the shell. The tool has two pins, one empty for removal and one with the new wax filter.

2. Remove



Push the empty pin into the wax filter in the Micro mould and pull it out.

3. Insert



Insert the new wax filter using the other pin, remove the tool, and throw it out.

Optional features and accessories

 
The features and accessories described on the following pages are optional. Please contact your hearing care professional to find out how your hearing aid is programmed.

If you experience difficult listening situations, a special program may be helpful. These are programmed by your hearing care professional.

Write down any hearing situations in which you may need help.

Mute the hearing aid

Use the mute function if you need to silence the hearing aid.




IMPORTANT NOTICE

Do not use the mute function as an off switch, as the hearing aid still draws current from the battery in this mode.

☐ Change programs

Your hearing aid can have up to 4 different programs. These are programmed by your hearing care professional.

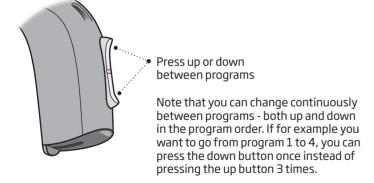


To be filled out by the hearing care professional

Program	Sound you will hear when actived		When to use
1)	"1 beep"	
2	4.6	"2 beeps"	
3	תתת	"3 beeps"	
4	תתתת	"4 beeps"	

Program change:	□LEFT	□RIGHT	☐ Short press	□ Long press	
-----------------	-------	--------	---------------	--------------	--

☐ Change volume

The push button allows you to adjust the volume. You will hear a click when you turn up or down the volume.

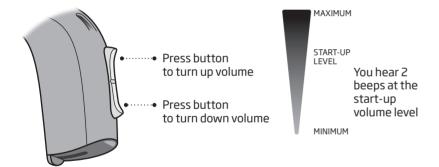


To be filled out by the hearing care professional

Volume change	□LEFT	□RIGHT	□Short press
---------------	-------	--------	--------------

Quick reset

If you wish to return to the standard settings of the hearing aid programmed by your hearing care professional, simply open and then close the battery drawer.

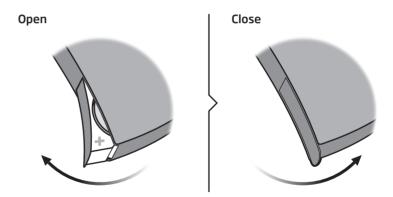

☐ Tamper-resistant battery drawer


To keep the battery out of reach of infants, small children and people with learning difficulties, a tamper-resistant battery drawer should be used. Use a small screwdriver to lock and unlock the drawer.

IMPORTANT NOTICE

Avoid excessive force to open the battery drawer when in the locked position. Do not force the battery drawer beyond its fully opened position. Make sure to insert the battery correctly.

Please contact your hearing care professional if you suspect the tamper-resistant effectiveness and locking ability is damaged.

Unlock the battery drawer

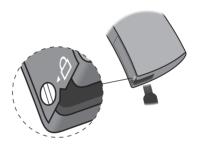

Use the screwdriver to turn the screw to unlock position (vertical). Insert the screwdriver into the slit in the bottom of the hearing aid and push the door open.

Lock the battery drawer



Make sure the drawer is completely closed. Turn the screw to the locked position (horizontal).

Wireless accessories

As an enhancement to your wireless hearing aid a broad range of wireless accessories are available.

☐ ConnectLine

ConnectLine is a family of products that allows you to receive audio signals from TVs, phones, music players, PCs or an external microphone wirelessly through your hearing aid.

☐ Remote Control

Remote Control offers the ability to change program, adjust volume or mute your hearing aid.

\square FM

Your hearing aid supports the option of attaching an FM system. The FM system allows you to receive speech or audio signals directly to your hearing aid from a dedicated transmitter. For detailed information on wireless accessories contact your hearing care professional or visit www.oticon.global

Other options



☐ Telecoil

helps you hear better when using a telephone with a built in loop or when you are in buildings with teleloop systems such as theatres, churches or lecture rooms. This symbol or a similar sign is shown wherever a teleloop has been installed.



□ Autophone

is a program that will automatically be activated when your telephone has a built in teleloop (see above). A magnet needs to be placed at your telephone next to the sound outlet.

☐ Direct Audio Input (DAI)

allows your hearing aid to receive signals directly from external sources such as TV, radio, music players, etc. The DAI adaptor is mounted to your hearing aid and via a cable connected to an external sound source.

For detailed information on these options contact your hearing care professional or visit **www.oticon.global**

IMPORTANT NOTICE

When the DAI is connected to an audio source plugged into a wall outlet, the audio source must comply with IEC-60065, IEC-60601 or equivalent safety standards.

⚠ Warnings

You should familiarise yourself fully with the following general warnings before using your hearing aid for your personal safety and to ensure correct use.

Please note that a hearing aid will not restore normal hearing and will not prevent or improve a hearing impairment resulting from organic conditions. Furthermore, note that in most cases, infrequent use of a hearing aid does not permit a user to attain full benefit from it.

Consult your hearing care professional if you experience unexpected operations or events with your hearing aid.

Usage of hearing aids

- Hearing aids should be used only as directed and adjusted by your hearing care professional. Misuse can result in sudden and permanent hearing loss.
- Never allow others to wear your hearing aid as incorrect usage could cause permanent damage to their hearing.

Choking hazards & risk of swallowing batteries

 Hearing aids, their parts, and batteries should be kept out of reach of children and anyone who might swallow these items, or otherwise cause injury to themselves.

- Batteries have occasionally been mistaken for pills. Therefore, check your medicine carefully before swallowing any pills.
- Most hearing aids can be supplied with a tamper-resistant battery drawer upon request. This is strongly recommended for infants, small children and people with learning difficulties.
- Children younger than 36 months must always use a tamper-resistant battery drawer. Please talk to your hearing care professional about the availability of this option.

If a battery or hearing aid is swallowed, see a doctor immediately.

Battery use

- Always use batteries recommended by your hearing care professional.
 Batteries of low quality may leak and cause bodily harm.
- Never attempt to recharge your batteries and never dispose of batteries by burning them. There is a risk that the batteries will explode.

⚠ Warnings

Dysfunction

 Be aware of the possibility that your hearing aid may stop working without notice. Keep this in mind when you depend on warning sounds (e.g. when you are in traffic). The hearing aids may stop functioning, for instance if the batteries have expired or if the tubing is blocked by moisture or ear wax.

Active implants

- Caution must be taken with active implants. In general, follow the guidelines recommended by manufacturers of implantable defibrillators and pacemakers regarding use with mobile phones and magnets.
- The Autophone magnet and MultiTool (which has a built-in magnet) should be kept more than 30 cm away from the implant, e.g. do not carry it in a breast pocket.

 If you have an active brain implant, please contact the manufacturer of your implantable device for information about the risk of disturbance.

X-ray, CT, MR, PET scanning and electrotherapy

 Remove your hearing aid before X-ray, CT/MR/PET scanning electrotherapy, surgery etc. as your hearing aid may be damaged when exposed to strong fields.

Heat and chemicals

- The hearing aid must never be exposed to extreme heat e.g. left inside a parked car in the sun.
- The hearing aid must not be dried in microwave ovens or other ovens.
- The chemicals in cosmetics, hairspray, perfume, aftershave lotion, suntan lotion and insect repellent can damage the hearing aid. Always remove your hearing aid before applying such products and allow time to dry before use.

⚠ Warnings

Power instrument

 Special care should be exercised in selecting, fitting and using a hearing aid where maximum sound pressure capability exceeds 132 dB SPL (IEC 711), as there may be risk of impairing the remaining hearing of the hearing aid user.

For information on whether your hearing aid is a power instrument, see the back of this leaflet.

Possible side effects

- Hearing aids, moulds or domes may cause an accelerated accumulation of ear wax.
- The otherwise non-allergenic materials used in hearing aids may in rare cases cause a skin irritation or other side effects.

Please seek consultation with a physician if these conditions occur.

Interference

 The hearing aid has been thoroughly tested for interference, according to the most stringent international standards. However, interference between the hearing aid and other devices (e.g. some mobile telephones, citizens band systems and shop alarm systems and other devices) may occur. If this occurs, increase the distance between the hearing aid and the interfering device.

Connection to external equipment

 The safety of the hearing aid when connected to external equipment (via auxiliary input cable, via USB cable, or directly), is determined by the external equipment. When connected to external equipment plugged into a wall outlet, this equipment must comply with IEC-60065, IEC-60950 or equivalent safety standards.

Troubleshooting guide

Symptom	Possible causes	Solutions
	Worn-out battery	Replace the battery
No sound	Clogged tube or earpieces (mould, dome, GripTip, Micro mould or LiteTip)	Clean mould
		Clean Corda miniFit (thin tube), replace dome or GripTip or replace wax filter
	Clogged sound outlet	Clean mould
		Clean Corda miniFit (thin tube), replace dome or GripTip or replace wax filter
Intermittent or reduced sound	Moisture	Wipe battery with a dry cloth and/or dry tube
	Worn-out battery	Replace the battery
	Clogged damping filter in sound hook	Contact your hearing care professional for assistance
Equaling paics	Hearing aid earpiece inserted incorrectly	Re-insert earpiece (mould, dome, GripTip, Micro mould or LiteTip)
Squealing noise	Ear wax accumulated in ear canal	Have ear canal examined by your doctor

If none of the above solutions work, consult your hearing care professional for assistance.

Water resistant

Your hearing instrument is water resistant which means it is designed to be worn in all daily life situations. Therefore you do not have to worry about sweat or getting wet in a rain shower. Should your hearing instrument come in contact with water and stop working, please follow these guidelines:

- 1. Gently wipe off any water
- Open the battery drawer and remove the battery and gently wipe off any water in the battery drawer
- 3. Let the hearing instrument dry with the battery drawer left open for approximately 30 minutes
- 4. Insert a new battery

IMPORTANT NOTICE

Do not wear your hearing instrument while showering or participating in water activities. Do not immerse your hearing instrument in water or other liquids.

Conditions of use

Operating conditions	Temperature: +1°C to +40°C Relative humidity: 5% to 93%, non-condensing	
Storage and transportation conditions	Temperature and humidity should not exceed the following limits for extended periods during transportation and storage:	
	Temperature: -25°C to +60°C Relative humidity: 5% to 93%, non-condensing	

Technical information

The hearing aid contains a radio transmitter using short range magnetic induction technology working at 3.84 MHz. The magnetic field strength of the transmitter is < -42 dBµA/m at a 10 meter distance.

The hearing aid complies with international standards concerning radio transmitters, electro-magnetic compatibility and human exposure.

Due to the limited space available on the instruments all relevant approval markings are found in this document.

USA and Canada

The hearing aid contains a radio module with the following certification ID numbers:

FCC ID: U28FU2BTERIT IC: 1350B-FU2BTERIT

The device complies with Part 15 of the FCC Rules and with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

More information: www.oticon.com.au

This Class B digital apparatus complies with Canadian ICES-003.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions. may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined

by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the manufacturer or an experienced radio/TV technician for help.

The manufacturer declares that this hearing aid is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

Declaration of Conformity is available from the manufacturer.



Manufactured by:
Oticon A/S
Kongebakken 9
DK-2765 Smørum
Denmark
www.oticon.global

C€ 0543







Australian Sponsor Oticon Australia a division of Audmet Australia Suite 4, Level 4, Building B 11 Talavera Road North Ryde NSW 2113

Description of symbols used in this booklet



Warnings

Text marked with a warning symbol must be read before using the device.



Manufacturer The device is produced by the manufacturer whose name and address are stated next to the symbol. Indicates the medical device manufacturer, as defined in EU Directives 90/385/EEC, 93/42/EEC and 98/79/EC.

CE mark



C € 0543 The device complies with Medical Device Directive 93/42/EEC. The four digits number indicates the identification of the notified body.



Electronic waste (WEEE)

Recycle hearing aids, accessories or batteries according to local regulations. Hearing aid users can also return electronic waste to their hearing care professional for disposal. Electronic equipment covered by Directive 2012/19/EU on waste and electrical equipment (WEEE).



Regulatory Compliance Mark (RCM)

The device complies with electrical safety, EMC and radio spectrum requirements for devices supplied to the Australian or New Zealand market.

IP code



Indicates the class of protections against harmful ingress of water and particulate matter according to EN 60529:1991/A1:2002.

IP5X indicates dust protection. IPX8 indicates the protection against the effects of continuous immersion in water.

Description of symbols used on the regulatory packaging label



Keep dry

Indicates a medical device that needs to be protected from moisture.



Caution symbol

Consult instructions for use for warnings and cautions.



Catalogue number

Indicates the manufacturer's catalogue number so that the medical device can be identified.



Serial number

Indicates the manufacturer's serial number so that a specific medical device can be identified.

International warranty

Your hearing aid is covered by an international limited warranty issued by the manufacturer for a period of 12 months from the date of delivery to you. This limited warranty covers manufacturing and material defects in the hearing aid itself, but not in accessories such as batteries, tubing, speakers, earpieces and filters, etc. Problems from improper or incorrect handling or care, excessive use, accidents, repairs made by an unauthorized party, exposure to corrosive conditions, physical changes in your ear, damage due to foreign objects entering the device, or incorrect adjustments are NOT covered by the limited warranty and may void it. Under this warranty, the manufacturer

will choose, in its sole discretion, whether to repair the hearing aid, or replace it with an equivalent model. The above warranty does not affect any legal rights that you might have under applicable national legislation governing sale of consumer goods. Your hearing care professional may have issued a warranty that goes beyond the clauses of this limited warranty. Please consult him/her for further information

If you need service

Take your hearing aid to your hearing care professional, who may be able to sort out minor problems and adjustments immediately. Your hearing care professional can assist you to obtain warranty service from the manufacturer. Your hearing care professional may charge a fee for their services.

Australia only

The rights given under this warranty are in addition to other rights and remedies under a law in relation to the good or services to which the warranty relates to. Our goods come with quarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Australian customers should contact Oticon Australia at Suite 4, Level 4, Building B, 11 Talavera Road, North Ryde NSW 2113, telephone 1800 633 738 if you have any questions regarding this warranty.

Warranty

Certificate

Name of owner:				
Hearing care professional:				
Hearing care professional's address: _	Hearing care professional's address:			
Hearing care professional's phone:				
Purchase date:				
Model left:	Serial no.:			
Model right:	Serial no.:			

Power instrument ☐ Yes ☐ No							
Settings overview for your hearing aid							
Le	Left Right						
☐ Yes	□No	Volume control	☐ Yes	□No			
☐ Yes	Yes No Program shift		☐ Yes	□No			
☐ Yes	□No	Mute	☐ Yes	□No			
	Volume control indicators						
□ 0n	☐ Off	Beeps at min /max volume	□On	□Off			
□ On	☐ Off	Clicks when changing volume	□On	□Off			
□ 0n	☐ Off	Beeps at preferred volume	□On	□Off			
Battery indicators							
□ On □ Off Low battery warning □ On □ Off							

151473AU / 2020.02.1



