

Instructions for use

IIC-CIC-MIC-ITC-
HS-FS

Alta2

Nera2

Ria2



Model overview

This booklet is valid for the following hearing aid families and models:

- | | | |
|---|---|--|
| <input type="checkbox"/> Oticon Alta2 Pro | <input type="checkbox"/> Oticon Nera2 Pro | <input type="checkbox"/> Oticon Ria2 Pro |
| <input type="checkbox"/> Oticon Alta2 | <input type="checkbox"/> Oticon Nera2 | <input type="checkbox"/> Oticon Ria2 |
| <input type="checkbox"/> IIC | Invisible-In-the-Canal | |
| <input type="checkbox"/> IIC V2 | Invisible-In-the-Canal | |
| <input type="checkbox"/> CIC | Completely-In-the-Canal | |
| <input type="checkbox"/> CIC V2 | Completely-In-the-Canal | |
| <input type="checkbox"/> MIC | Mostly-In-the-Canal | |
| <input type="checkbox"/> ITC | In-the-Canal | |
| <input type="checkbox"/> HS | Half-Shell | |
| <input type="checkbox"/> FS | Full Shell | |

Introduction to this booklet

This booklet guides you in how to use and maintain your new hearing aid. Please read the booklet carefully including the **Warning section**. This will help you to achieve the full benefit of your new hearing aid.

Your hearing care professional has adjusted the hearing aid to meet your needs. If you have additional questions, please contact your hearing care professional.

For your convenience this booklet contains a navigation bar to help you navigate easily through the different sections.

| **About** | [Start up](#) | [Handling](#) | [Options](#) | [Warnings](#) | [More info](#) |

Intended use

The hearing aid is intended to amplify and transmit sound to the ear and thereby compensate for impaired hearing within mild to severe hearing loss. The hearing aid is not intended to be used by infants/children < 36 months.

IMPORTANT NOTICE

The hearing aid amplification is uniquely adjusted and optimised to your personal hearing capabilities during the hearing aid fitting performed by your hearing care professional.

Table of contents 1/2

About

Identify your hearing aid style	10
Size 10 battery (CIC shown)	12
Size 312 battery (ITC shown)	14
Size 13 battery (Full shell shown)	16
Identify left and right hearing aid	18
Battery	19

Start up

Turn the hearing aid on and off	20
When to replace a battery	21
Replace the battery	22

Handling

Caring for your hearing aid	24
MultiTool for handling batteries and cleaning	26
Filter replacement	28
Replace ProWax miniFit filter (non-wireless IIC & CIC V2 75)	29

Replace ProWax filter (all hearing aids except non-wireless IIC & CIC V2 75)	30
Replace T-Cap filter (hearing aids with 10 batteries)	31
Replace O-Cap filter (hearing aids with 312 and 13 batteries)	32
Insert the hearing aid	33
Remove your hearing aid	34

Options

Optional features and accessories	36
Mute the hearing hearing aid (optional)	37
Change programs (optional)	38
Change volume with push button (optional)	40
Change volume with volume wheel (optional)	41
Wireless accessories (optional)	43
Other options (optional)	44

Table of contents 2/2

Warnings

Warnings	46
----------	----

 
More info

Troubleshooting guide	52
Water & dust resistant (IP68)	54
Conditions of use	55
Technical information	56
Australia only	64
Warranty	65

Identify your hearing aid style


For your in-the-ear aid, there are several different styles and sizes. Please identify your style. This will make it easier for you to navigate through this booklet.

- **Size 10 battery**
(IIC, CIC, MIC, ITC,
HS)




IIC non-wireless shown

 - **Size 312 battery**
(ITC, HS, FS)

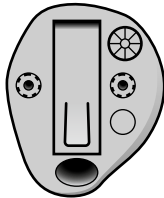

ITC shown

 - **Size 13 battery**
(ITC, HS, FS)

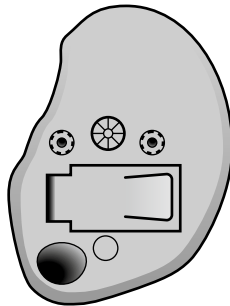


HS shown


All styles come in different shapes and with different configurations.

Size 10 battery (CIC shown)

 What it is

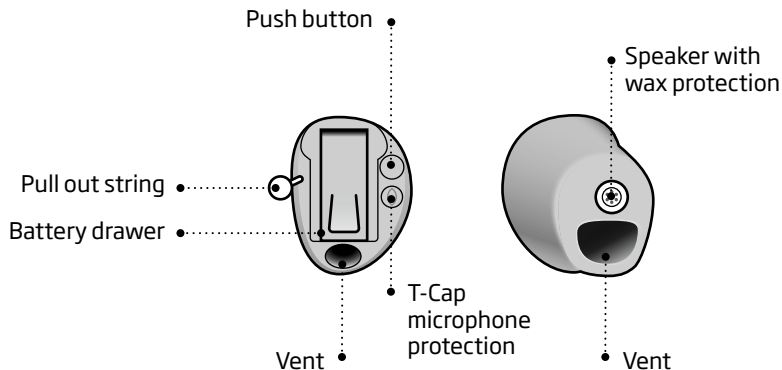


What it does

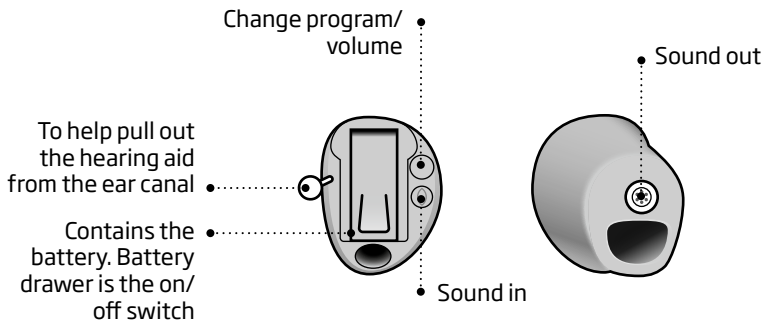 


Components may be positioned differently on your hearing aid.

Size 312 battery (ITC shown)

 What it is

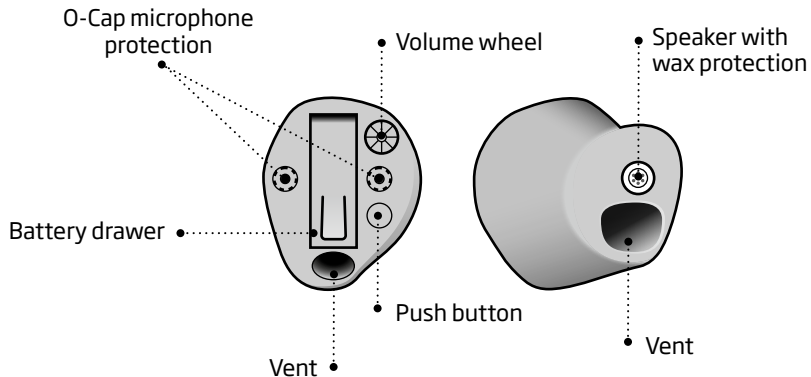


What it does

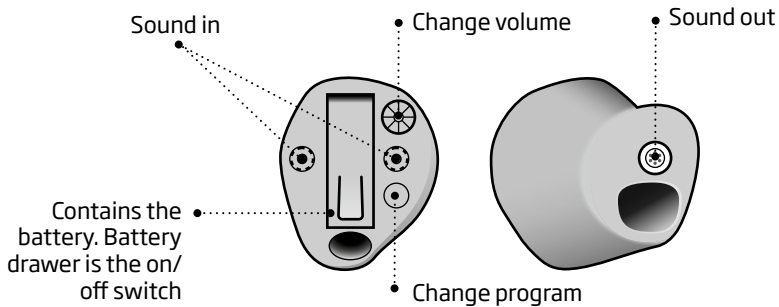 


Components may be positioned differently on your hearing aid.

Size 13 battery (Full shell shown)

 What it is

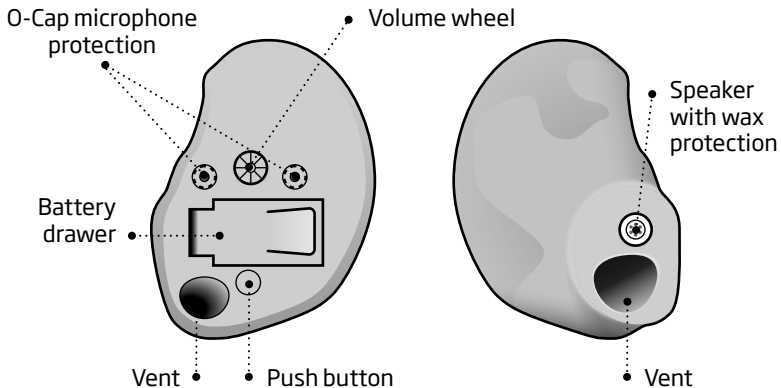

What it does

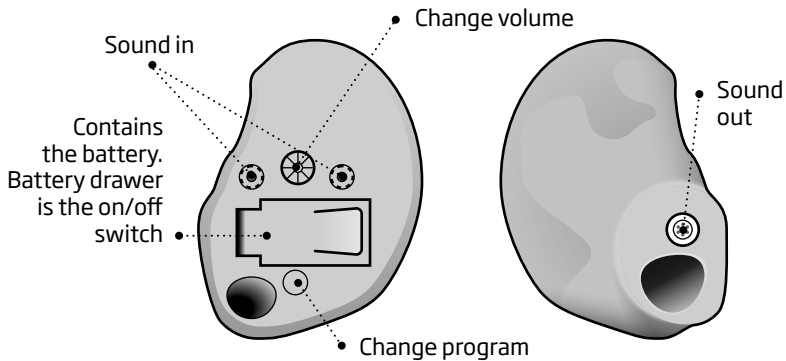 

Components may be positioned differently on your hearing aid.

Identify left and right hearing aid

It is important to distinguish between the left and the right hearing aid as they might be shaped and programmed differently.

 


A **BLUE** shell, text or dot identifies the **LEFT** hearing aid

A **RED** shell, text or dot identifies the **RIGHT** hearing aid

Battery

Your hearing aid is a miniature electronic device that runs on special batteries. To activate the hearing aid, you must insert a new battery in the battery drawer. See how in the “Replace the battery” section.

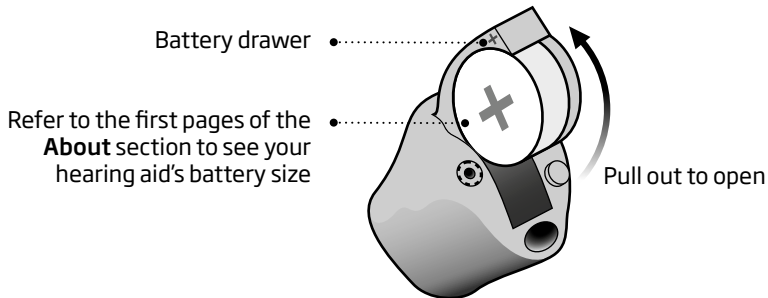


Turn the hearing aid on and off

The battery drawer is also used to switch the hearing aid on and off. To preserve the battery, make sure your hearing aid is switched off when you are not wearing it.


Turn ON

 Close the battery drawer with the battery in place.

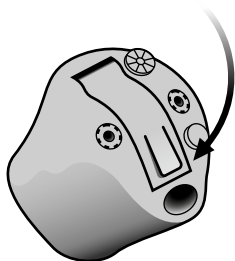

Turn OFF

 Open the battery drawer

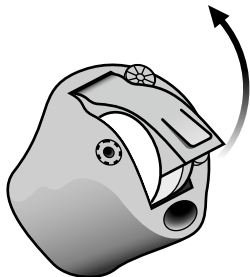

When to replace a battery

When it is time to replace the battery you will hear two beeps repeated in moderate intervals until the battery runs out.



Two beeps

= The battery is running low



Four beeps

= The battery has run out

Battery maintenance tip

To make sure the hearing aid is always working bring spare batteries with you, or replace the battery before you leave home.

 
Replace the battery

1. Remove



Fully open the battery drawer. Remove the battery.

2. Uncover

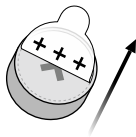


Remove the sticky label from the + side of the new battery.

3. Insert




Insert the new battery into the battery drawer. Make sure the + side faces the + on the battery drawer.

 4. Close

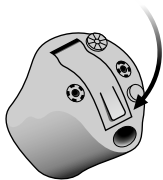

Close the battery drawer.
The hearing aid will play
a jingle. Hold the hearing aid
close to your ear to hear the jingle.

 Tip

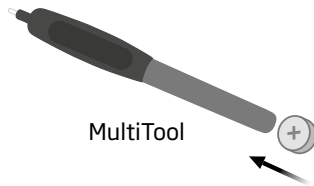

The MultiTool can be used for
battery change. Use the magnetic
end to remove and insert batteries.

 
The MultiTool is provided by
your hearing care professional.

Caring for your hearing aid


When handling your hearing aid, hold it over a soft surface to avoid damage if you drop it.

Cleaning the hearing aid

Carefully brush away debris from the microphone openings with a clean brush. Gently brush the surface.

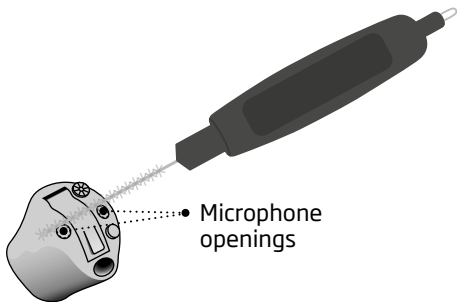

 Clean the vent by pressing the brush through the hole while twisting it slightly.

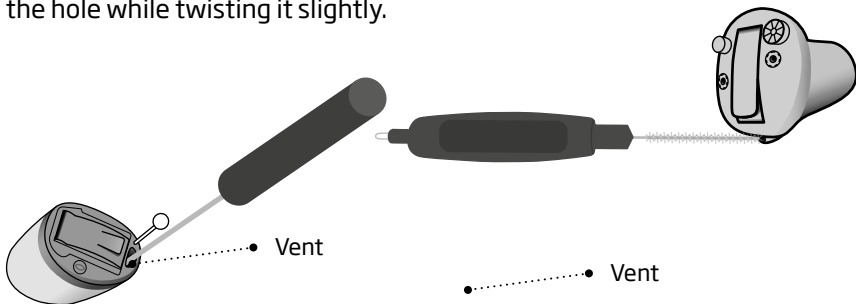


IMPORTANT NOTICE

Use a soft, dry cloth to clean the hearing aid. It must never be washed or immersed in water or other liquids.

MultiTool for handling batteries and cleaning

 
The MultiTool contains a magnet which makes it easier to replace the battery in the hearing aid. It also contains a brush and a wire loop for cleaning and removing ear wax. If you need a new MultiTool please contact your hearing care professional.

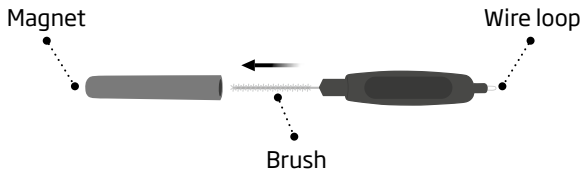

IMPORTANT NOTICE

The MultiTool has a built-in magnet. Keep the MultiTool 30 cm away from credit cards and other magnetically sensitive devices.

 If the vent is very small, a special tool may be required. Please consult your hearing care professional.

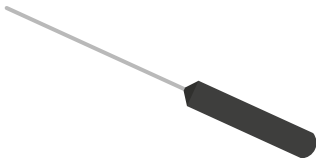

Filter replacement

If you experience reduced sound quality, it is time to change the filters.

Please refer to the following pages for instructions on how to replace the appropriate filters. Please notice that there are two different wax filters for the custom hearing aid.

 
IMPORTANT NOTICE

Always use the same type of wax filter as was originally supplied with the hearing aid.

If you are in any doubt about the use or replacement of wax filters, contact your hearing care professional.


□ **Replace ProWax miniFit filter** (non-wireless IIC & CIC V2 75)

1. Tool

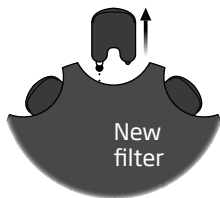


Remove the tool from the shell. The tool has two pins, one empty for removal and one with the new ProWax mini filter.

 2. Remove

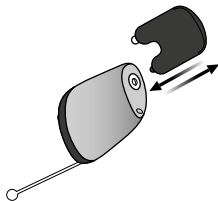

Push the empty pin into the ProWax mini filter in the hearing aid and pull it out.

 3. Insert

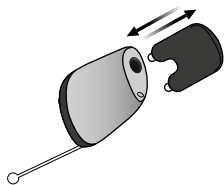


Insert the new ProWax mini filter using the other pin, remove the tool and throw it out.

□ **Replace ProWax filter**


(all hearing aids except non-wireless IIC & CIC V2 75)

 1. Tool

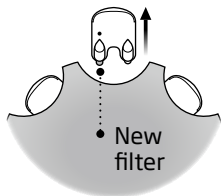


Remove the tool from the shell. The tool has two pins, one empty for removal and one with the new ProWax filter.

 2. Remove

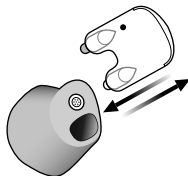

Push the empty pin into the ProWax filter in the hearing aid and pull it out.

 
3. Insert

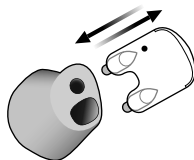

Insert the new ProWax filter using the other pin, remove the tool and throw it out.


□ **Replace T-Cap filter** (hearing aids with 10 batteries)

 1. Tool

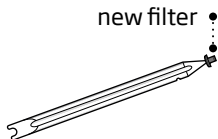


Remove the tool from the packaging. The tool has two ends, one for removal and one with the new T-Cap filter.

 2. Remove

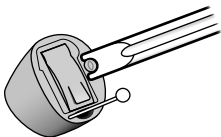

Push the tool fork under the top edge of the used T-Cap filter and lift it out.

 
3. Insert

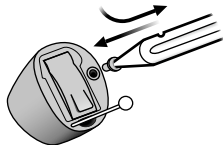

Insert the new T-Cap filter and remove the tool by twisting it slightly. Throw the tool out after use.


□ **Replace O-Cap filter** (hearing aids with 312 and 13 batteries)

 1. Tool

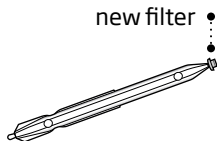


Remove the tool from the packaging. The tool has two ends, one for removal and one with the new O-Cap filter.

 2. Remove

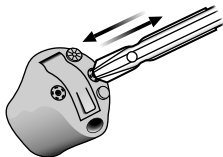

Push the pointed end of the tool into the existing O-Cap filter and pull it out.

 3. Insert

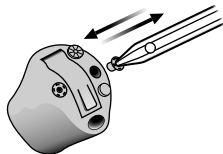

Insert the new O-Cap filter using the other end of the tool, remove the tool and throw it out.

 
Insert the hearing aid

Step 1



Hold the hearing aid with the coloured dot facing upwards. Place the tip of the hearing aid in your ear canal.

Step 2

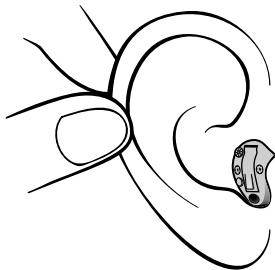

Gently pull your ear outwards and push the hearing aid into the ear canal, twisting slightly if necessary. Follow the natural contour of the ear canal.

Remove your hearing aid

Hold the hearing aid by the pull-out string (if available). Gently pull the hearing aid from the ear canal.

If your hearing aid doesn't have a pull-out string, you can remove it by pulling on the edge of the hearing aid.

IMPORTANT NOTICE

DO NOT use the battery door as a handle to insert or remove your hearing aid. It is not designed for this purpose.

Optional features and accessories

 
The features and accessories described on the following pages are optional. Please contact your hearing care professional to find out how your hearing aid is programmed.

If you experience difficult listening situations, a special program may be helpful. These are programmed by your hearing care professional.

Write down hearing situations where you may need help.

Mute the hearing hearing aid (optional)

Use the mute function if you need to silence the hearing aid while wearing it.

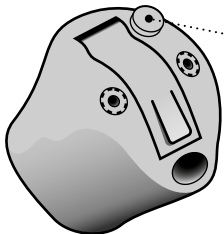


- Apply a very long press to the push button to mute the hearing aid. To reactivate the hearing aid, push the button briefly.

IMPORTANT NOTICE

Do not use the mute function as an off switch, as the hearing aid still draws current from the battery in this mode.

□ **Change programs** (optional)

 Your hearing aid can have up to 4 different programs. These are programmed by your hearing care professional.

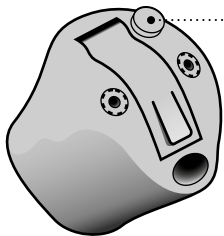





- Press the button to change program. Use a short press if the push button is used for program change only and a long press if it is also used for volume control.

Note that if you have two synchronised hearing aid, (both instruments respond when either push button is operated) the RIGHT hearing aid switches forward from e.g., program 1 to 2 and the LEFT hearing aid switches backwards from e.g., program 4 to 3.

If your hearing aids work independently, you must press the buttons on each hearing aid.


To be filled out by the hearing care professional

Program	Sound you will hear when activated	When to use
1	 "1 beep"	
2	 "2 beeps"	
3	 "3 beeps"	
4	 "4 beeps"	

Program change:	
<input type="checkbox"/> Independent	<input type="checkbox"/> Synchronised
<input type="checkbox"/> LEFT	<input type="checkbox"/> RIGHT
<input type="checkbox"/> Short press	<input type="checkbox"/> Long press

Change volume with push button (optional)

 The push button allows you to adjust the volume.
You may hear a click when you turn the volume up or down.

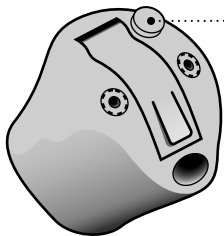

A short press on the
RIGHT hearing aid
increases the volume

A short press on the
LEFT hearing aid
decreases the volume



You hear 2
beeps at the
starting
volume level



To be filled out by the hearing care professional

Volume change	<input type="checkbox"/> LEFT	<input type="checkbox"/> RIGHT
---------------	-------------------------------	--------------------------------

□ **Change volume with volume wheel** (optional)

The volume wheel allows you to adjust the volume.

  
You may hear a click when you turn up or down the volume.

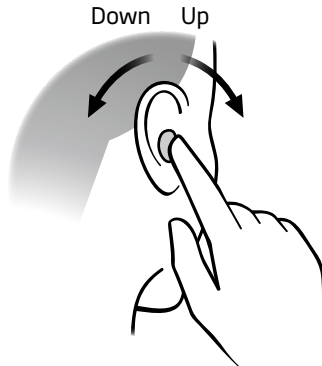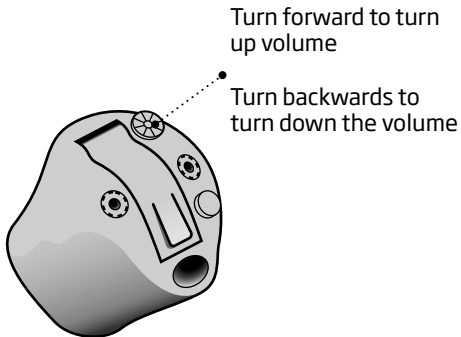


Quick reset

If you wish to return to the standard settings of the hearing aid programmed by your hearing care professional, simply open and then close the battery drawer.

 Open

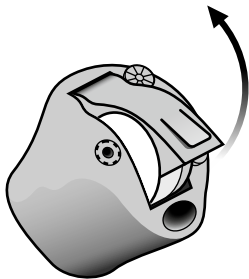

Close

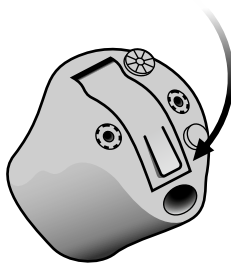 

Wireless accessories (optional)

As an enhancement to your wireless hearing aid a broad range of wireless accessories are available.

ConnectLine

ConnectLine is a family of products that allows you to receive audio signals from TVs, phones, music players, PCs or an external microphone wirelessly through your hearing aid.

Remote Control

The Remote Control offers the ability to change program, adjust the volume or mute your hearing aid.

 
For more information, please contact your hearing care professional or visit www.oticon.com.au

Other options (optional)



Telecoil

Telecoil helps you hear better when using a telephone with a built in loop or when you are in buildings with teleloop systems such as theatres, churches or lecture rooms. This symbol or a similar sign is shown wherever a teleloop has been installed.



Autophone

is a program that will automatically be activated when your telephone has a built in teleloop (see above). A magnet needs to be placed at your telephone next to the sound outlet.

For more information, please contact your hearing care professional.

Warnings

You should familiarise yourself fully with the following general warnings before using your hearing aid for your personal safety and to ensure correct use.

Please note that a hearing aid will not restore normal hearing and will not prevent or improve a hearing impairment resulting from organic conditions. Furthermore, note that in most cases, infrequent use of a hearing aid does not permit a user to attain full benefit from it.

Consult your hearing care professional if you experience unexpected operations or events with your hearing aid.

Usage of hearing aids

- Hearing aids should be used only as directed and adjusted by your hearing care professional. Misuse can result in sudden and permanent hearing loss.
- Never allow others to wear your hearing aid as incorrect usage could cause permanent damage to their hearing.

Choking hazards & risk of swallowing batteries

- Hearing aids, their parts, and batteries should be kept out of reach of children and anyone who might swallow these items, or otherwise cause injury to themselves.

- Batteries have occasionally been mistaken for pills. Therefore check your medicine carefully before swallowing any pills.
- Most hearing aids can be supplied with a tamper-resistant battery drawer upon request. This is strongly recommended for infants, small children and people with learning difficulties.
- Children below 36 months must always use a tamper-resistant battery drawer. This option is available in BTE, miniBTE, RITE and miniRITE hearing aids.

If a battery or hearing aid is swallowed, see a doctor immediately.

Battery use

- Always use batteries recommended by your hearing care professional. Batteries of low quality may leak and cause bodily harm.
- Never attempt to recharge your batteries and never dispose of batteries by burning them. There is a risk that the batteries will explode.

Warnings

Dysfunction

- Be aware of the possibility that your hearing aid may stop working without notice. Keep this in mind when you depend on warning sounds (e.g., when you are in traffic). The hearing aid may stop functioning, for instance if the batteries have expired or if the tubing is blocked by moisture or ear wax.

Active implants

- Caution must be taken with active implants. In general, follow the guidelines recommended by manufacturers of implantable defibrillators and pacemakers regarding use with mobile phones and magnets.
- The Autophone magnet and Multi-Tool (which has a built-in magnet) should be kept more than 30 cm away from the implant, e.g. do not carry it in a breast pocket. pocket.

- If you have an active brain implant, please contact the manufacturer of your implantable device for information about the risk of disturbance.

X-ray, CT, MR, PET scanning and electrotherapy

- Remove your hearing aid for example during X-ray, CT / MR / PET scanning electrotherapy or surgery as your hearing aid may be damaged when exposed to strong fields.

Heat and chemicals

- Your hearing aid must never be exposed to extreme heat e.g., left inside a parked car in the sun.
- Your hearing aid must not be dried in microwave ovens or other ovens.
- The chemicals in cosmetics, hairspray, perfume, after shave lotion, suntan lotion and insect repellent can damage your hearing aid. Always remove your hearing aid before applying such products and allow time to dry before putting it on.

Warnings

Power instrument

- Special care should be exercised in selecting, fitting and using a hearing aid where maximum sound pressure capability exceeds 132 dB SPL (IEC 711), as there may be risk of impairing the remaining hearing of the hearing aid user.

For information on whether your hearing aid is a power instrument, see the back of this leaflet.

Possible side effects

- Hearing aids, moulds or domes may cause an accelerated accumulation of ear wax.
- The otherwise non-allergenic materials used in hearing aids may in rare cases cause a skin irritation or any other unusual condition.

Please seek consultation with a physician if these conditions occur.

Interference

- Your hearing aid has been thoroughly tested for interference, according to the most stringent international standards. However, interference with your hearing aid and other devices may occur, (e.g., some mobile telephones, citizens band systems, and shop alarm systems). If this occur increase the distance between the hearing aid and the device.



WARNING

New and used button/coin batteries are hazardous and should be kept away from children. Button/coin batteries can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek medical attention immediately if this is suspected.

If it is suspected a button/coin battery has been swallowed or otherwise placed inside any part of the body, you should contact the

Australian Poisons Information Centre
on 13 11 26

New Zealand National Poisons Centre
on 0800 764 766
immediately for 24/7 fast, expert advice.

Troubleshooting guide

Symptom	Possible causes
No sound	Worn-out battery
	Clogged sound outlet
	Clogged microphone inlet
Intermittent or reduced sound	Clogged sound outlet
	Moisture
	Worn-out battery
Squealing noise	Hearing aid not inserted properly
	Ear wax accumulated in ear canal

If none of the above solutions work, consult your hearing care professional for assistance.

Solutions

Replace the battery

Clean sound outlet or replace the wax filter

Clean microphone inlet or replace filter (T-Cap or O-Cap)

Clean sound outlet or replace the wax filter

Wipe battery and hearing aid with a dry cloth

Replace the battery

Re-insert the hearing aid

Have ear canal examined by your doctor

Water & dust resistant (IP68)

Your hearing aid is dust-tight and protected against ingress of water which means it is designed to be worn in all daily life situations. Therefore you do not have to worry about sweat or getting wet in the rain. Should your hearing aid come in contact with water and stop working, please follow the these guidelines:

1. Gently wipe off any water
2. Open the battery drawer and remove the battery and gently wipe off any water in the battery drawer
3. Let the hearing aid dry with the battery drawer left open for approximately 30 minutes
4. Insert a new battery

IMPORTANT NOTICE

Do not wear your hearing aid while showering or participating in water activities. Do not immerse your hearing aid in water or other liquids.

Conditions of use

Operating conditions	Temperature: +1°C to +40°C Relative humidity: 5% to 93%, non-condensing
Storage and transportation conditions	Temperature and humidity should not exceed the following limits for extended periods during transportation and storage: Temperature: -25°C to +60°C Relative humidity: 5% to 93%, non-condensing

Technical information

The hearing aid contains a radio transmitter using short range magnetic induction technology working at 3.84 MHz. The magnetic field strength of the transmitter is $< -42 \text{ dB}\mu\text{A/m @ 10m}$.

The emission power from the radio system is well below international emission limits for human exposure. For comparison, the radiation of the hearing aid is lower than unintended electromagnetic radiation from for example halogen lamps, computer monitors, dishwashers, etc. The hearing aid complies with international standards concerning Electromagnetic Compatibility.

Due to the limited space available on the instruments all relevant approval markings are found in this document.

IIC, CIC & MIC wireless instruments contain a module with:

FCC ID: U28FU2CICWL
IC: 1350B-FU2CICWL

ITC, HS & FS wireless instruments contain a module with:

FCC ID: U28FU2ITE
IC: 1350B-FU2ITE

The device complies with Part 15 of the FCC Rules and with Industry Canada's licence-exempt RSSs.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

More information: www.oticon.com.au

The manufacturer declares that this hearing aid is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

Declaration of Conformity is available from the manufacturer.



Manufactured by:
Oticon A/S
Kongebakken 9
DK-2765 Smørum
Denmark
www.oticon.global

CE 0543



Waste from electronic equipment must be handled according to local regulations.



E2831

IP68

Australian Sponsor

Audmet Australia Pty Ltd
Suite 4, Level 4, Building B
11 Talavera Road
North Ryde NSW 2113

Description of symbols used in this booklet



Warnings

Text marked with a warning symbol must be read before using the device.



Manufacturer

The device is produced by the manufacturer whose name and address are stated next to the symbol. Indicates the medical device manufacturer, as defined in EU Directives 90/385/EEC, 93/42/EEC and 98/79/EC.



CE mark

The device complies with Medical Device Directive 93/42/EEC. The four digits number indicates the identification of the notified body.



Electronic waste (WEEE)

Recycle hearing aids, accessories or batteries according to local regulations. Hearing aid users can also return electronic waste to their hearing care professional for disposal. Electronic equipment covered by Directive 2012/19/EU on waste and electrical equipment (WEEE).



Regulatory Compliance Mark (RCM)

The device complies with electrical safety, EMC and radio spectrum requirements for devices supplied to the Australian or New Zealand market.

IP68

IP code

Indicates the class of protections against harmful ingress of water and particulate matter according to EN 60529:1991/A1:2002.

IP6X indicates total dust protection. IPX8 indicates the protection against the effects of continuous immersion in water.

Description of symbols used on the regulatory packaging label



Keep dry

Indicates a medical device that needs to be protected from moisture.



Caution symbol

Consult instructions for use for warnings and cautions.



Catalogue number

Indicates the manufacturer's catalogue number so that the medical device can be identified.



Serial number

Indicates the manufacturer's serial number so that a specific medical device can be identified.



Button Battery Warning

The device is intended to be used with button batteries. Refer to enclosed warnings before using the device.

International warranty

Your device is covered by an international limited warranty issued by the manufacturer for a period of 12 months from the date of delivery to you. This limited warranty covers manufacturing and material defects in the device itself, but not in accessories such as batteries, tubing, speakers, earpieces and filters, etc. Problems arising from improper/incorrect handling or care, excessive use, accidents, repairs made by an unauthorised party, exposure to corrosive conditions, physical changes in your ear, damage due to foreign objects entering the device, or incorrect adjustments are NOT covered by the limited warranty and may void it. Under this warranty, the

manufacturer will choose, at its sole discretion, whether to repair the device, or replace it with an equivalent model. The above warranty does not affect any legal rights that you might have under applicable national legislation governing sale of consumer goods. Your hearing care professional may have issued a warranty that goes beyond the clauses of this limited warranty. Please consult him/her for further information.

If you need service

Take your device to your hearing care professional, who may be able to sort out minor problems and make adjustments immediately. Your hearing care professional can assist you to obtain warranty service from the manufacturer. Your hearing care professional may charge a fee for their services.

Australia only

The rights given under this warranty are in addition to other rights and remedies under a law in relation to the good or services to which the warranty relates to. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Australian customers should contact Oticon Australia at Suite 4, Level 4, Building B, 11 Talavera Road, North Ryde NSW 2113, telephone 1800 633 738 if you have any questions regarding this warranty.

Warranty

Certificate

Name of owner: _____

Hearing care professional: _____

Hearing care professional's address: _____

Hearing care professional's phone: _____

Purchase date: _____

Model left: _____ Serial no.: _____

Model right: _____ Serial no.: _____

Power instrument Yes No

Settings overview for your hearing aid

Left

Right

Yes No

Volume control

Yes No

Yes No

Program shift

Yes No

Yes No

Mute

Yes No

Volume control indicators

On Off

Beeps at min / max volume

On Off

On Off

Clicks when changing volume

On Off

On Off

Beeps at preferred volume

On Off

Battery indicators

On Off

Low battery warning

On Off



oticon
life-changing **technology**